

# Regular Shelf - SignPost System™ - YST Series

1. Insert the knob/glide screw into the slot of the upright at desired height. Tighten the knob to secure position. Repeat with the knob/glide on the second upright, positioning at same height.
2. With the shelf at an angle, place shelf in between uprights. Insert the one guide pin into upright slot and rest the shelf notch on puck, then carefully lower other side, aligning the other guide pin into the slot.

