


Frames (Perfex™ Curvilinear Hanging Kit)

Applicable Products:

PXCU Hanging Kit Series

1. If mounting on drywall or hollow walls, pre-drill a 3/16" hole and insert molly anchors provided (not shown).
2. Screw bottom wall mount brackets to wall (fig. A).
3. Screw top wall mount brackets to wall (fig. B-1) or hammer nails into wall to secure (fig. B-2).
4. If frame is being hung from ceiling, insert hanging clips (fig. C) and use wire to hang (not shown).

If mounting to the wall:

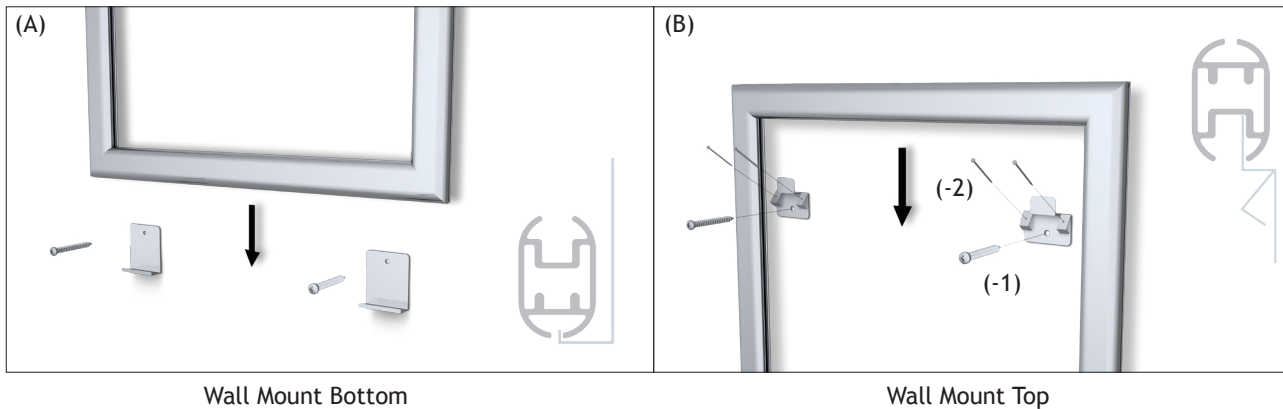

If hanging from the ceiling:

